



DIGITAL PIANO

P - 1 4 5 B T

P - 1 4 3 B T

Owner's Manual

The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No.

Serial No.

(1003-M06 plate bottom en 01)

Information for users on collection and disposal of old equipment:



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union:

This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

(58-M02 WEEE en 01)

Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

| | |
|---|----------------|
| <p>Important Notice: Guarantee Information for customers in EEA* and Switzerland</p> <p>For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area</p> | English |
| <p>Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz</p> <p>Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR*- und Schweizer Garantieservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum</p> | Deutsch |
| <p>Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse</p> <p>Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. * EEE : Espace Economique Européen</p> | Français |
| <p>Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland</p> <p>Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europese Economische Ruimte</p> | Nederlands |
| <p>Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza</p> <p>Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir esta disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo</p> | Español |
| <p>Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera</p> <p>Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea</p> | Italiano |
| <p>Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça</p> <p>Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Européia</p> | Português |
| <p>Σημαντική σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελλάδα</p> <p>Για λεπτομερείς πληροφορίες εγγύησης σχετικά με το παρόν προϊόν της Yamaha και την κώλυση εγγύησης σε όλες τις χώρες του ΕΟΧ και την Ελλάδα, επισκεφτείτε την παρακάτω ιστοσελίδα (Εκτυπώσιμη μορφή είναι διαθέσιμη στην ιστοσελίδα μας) ή απευθυνθείτε στην αντιπροσωπεία της Yamaha στη χώρα σας. * ΕΟΧ: Ευρωπαϊκός Οικονομικός Χώρος</p> | Ελληνικά |
| <p>Viktigt: Garantiinformation för kunder i EES-området* och Schweiz</p> <p>For detaljerad information om denna Yamaha-produkt samt garantiservice i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsvänlig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet</p> | Svenska |
| <p>Viktig merknad: Garantiinformasjon for kunder i EØS* og Sveits</p> <p>Detaljert garantiinformasjon om dette Yamaha-produktet og garantiservice for hele EØS-området* og Sveits kan fås enten ved å besøke nettstedene nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte kontaktpunktet i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet</p> | Norsk |
| <p>Vigtig oplysning: Garantioplysninger til kunder i EØ* og Schweiz</p> <p>De kan finde detaljerede garantioplysninger om dette Yamaha-produkt og den fælles garantiserviceordning for EØ* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØ: Det Europæiske Økonomiske Område</p> | Dansk |
| <p>Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA)* ja Sveitsin asiakkaille</p> <p>Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta nettiosoitteesta. (Tulostettava tiedosto saatavissa sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. *ETA: Euroopan talousalue</p> | Suomi |
| <p>Ważne: Warunki gwarancji i obowiązujące w EOG* i Szwajcarii</p> <p>Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (Plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. * EOG — Europejski Obszar Gospodarczy</p> | Polski |
| <p>Důležité oznámení: Záruční informace pro zákazníky v EHS* a ve Švýcarsku</p> <p>Podrobné záruční informace o tomto produktu Yamaha a záručním servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zástupce firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor</p> | Česky |
| <p>Fontos figyelemzetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára</p> <p>A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomtatható fájl is található), vagy pedig lépjen kapcsolatba az országában működő Yamaha képviselői iróddal. * EGT: Európai Gazdasági Térség</p> | Magyar |
| <p>Oluline märkus: Garantiteave Euroopa Majanduspiirkonna (EMP)* ja Šveitsi klientidele</p> <p>Täpsema teabe saamiseks selle Yamaha toote garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiiteeniduse kohta, külastage palun veebisaiti alljärgneval aadressil (meie saidil on saadaval printitav fail) või pöörduge Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond</p> | Eesti keel |
| <p>Svarīgs paziņojums: garantijas informācija klientiem EEZ* un Šveicē</p> <p>Lai saņemtu detalizētu garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ* un Šveicē, lūdz, apmeklējiet zemāk norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazinieties ar jūsu valstī apkalpojošo Yamaha pārstāvniecību. * EEZ: Eiropas Ekonomikas zona</p> | Latviešu |
| <p>Dėmesio: informacija dėl garantijos pirkėjams EEE* ir Šveicarijoje</p> <p>Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytu adresu (svetainėje yra spausdinlinas failas) arba kreipkitės į „Yamaha“ atstovybę savo šaliai. *EEE – Europos ekonominė erdvė</p> | Lietuvių kalba |
| <p>Dôležité upozornenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku</p> <p>Podrobné informácie o záruke týkajúce sa tohto produktu Yamaha a garančného servisu v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine. * EHP: Európsky hospodársky priestor</p> | Slovenčina |
| <p>Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švici</p> <p>Za podrobnejše informacije o tem Yamahinem izdelku ter garancijskem servisu v celotnem EGP in Švici, obiščite spletno mesto, ki je navedeno spodaj (natiskljiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor</p> | Slovenščina |
| <p>Важно съобщение: Информация за гаранцията за клиенти в ЕИП* и Швейцария</p> <p>За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в паневропейската зона на ЕИП* и Швейцария или посетете посочения по-долу уеб сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна. * ЕИП: Европейско икономическо пространство</p> | Български език |
| <p>Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția</p> <p>Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European</p> | Limba română |
| <p>Važna obavijest: Informacije o jamstvu za države EGP-a i Švicarske</p> <p>Za detaljne informacije o jamstvu za ovaj Yamahin proizvod te jamstvenom servisu za cijeli EGP i Švicarsku, molimo Vas da posjetite web-stranicu navedenu u nastavku ili kontaktirate ovlaštenog Yamahinog dobavljača u svojoj zemlji. * EGP: Europski gospodarski prostor</p> | Hrvatski |

<https://europe.yamaha.com/warranty/>

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Especially in the case of children, a guardian should provide guidance on how to properly use and handle the product before actual use.

Please keep this manual in a safe and handy place for future reference.



WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Do not touch the product or the power plug during an electrical storm.
- Use only the correct voltage specified for the product. The required voltage is printed on the name plate of the product.
- Use only the supplied or the specified AC adaptor (page 16). Do not use the AC adaptor for other devices.
- Check the power plug periodically and remove any dirt or dust which may have accumulated on it.
- Insert the power plug firmly all the way into the AC outlet. Using the product when it is not plugged in sufficiently can cause dust to accumulate on the plug, possibly resulting in fire or skin burns.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the product will not be disconnected from the power source.
- Do not connect the product to an electrical outlet using a multi-plug outlet extender. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.
- When disconnecting the power plug, always hold the plug itself and not the cord. Pulling by the cord can damage it and cause electric shocks or a fire.
- If not using the product for long periods of time, be sure to pull the power plug from the AC outlet.

Do not disassemble

- This product contains no user-serviceable parts. Do not attempt to disassemble the internal parts or modify them in any way.

Water warning

- Do not expose the product to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings or places where water may drop. A liquid such as water getting into the product may cause a fire, electric shocks, or malfunctions.
- Use the AC adaptor indoors only. Do not use in any wet environments.
- Never insert or remove a power plug with wet hands.

Fire warning

- Do not place any burning items or open flames near the product, since they may cause a fire.

Wireless unit

- Radio waves from this product may affect electro-medical devices, such as a heart pacemaker implant or defibrillator implant.
 - Do not use the product near medical devices or inside medical facilities. Radio waves from this product may affect electro-medical devices.
 - Do not use the product within 15 cm (6 in.) of persons with a heart pacemaker implant or a defibrillator implant.

If you notice any abnormality

- If any of the following problems occur, immediately turn off the power switch and disconnect the power plug from the outlet. Finally have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - Unusual smells or smoke are emitted.
 - Some object, or water has been dropped into the product.
 - There is a sudden loss of sound during use of the product.
 - Cracks or other visible damage appear on the product.

CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the product or other property. These precautions include, but are not limited to, the following:

Location

- Do not place the product in an unstable position or a location with excessive vibration, where it might accidentally fall over and cause injury.
- Before moving the product, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- Use only the stand specified for the product. When attaching it, use the provided screws only. Failure to do so could cause damage to the internal components or result in the product falling over.

Connections

- Before connecting the product to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.
- Be sure to set the volumes of all devices at their minimum levels and gradually raise the volume controls while playing the product to set the desired listening level.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the product, or data that is lost or destroyed.

Always turn the power off when the product is not in use.

Even when the [] (Standby/On) switch is in standby status (power lamp is off), electricity is still flowing to the product at the minimum level.

When you are not using the product for a long time, make sure you unplug the power cord from the wall AC outlet.

DMI-11

NOTICE

To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

■ Handling

- Do not use the product in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, this product or the other device may generate noise.
When you use the product along with an app on your smart device, such as a smartphone or tablet, we recommend that you enable "Airplane Mode" on the device to avoid noise caused by communication. When turning on airplane mode, **Bluetooth**® settings may be turned off. Make sure that the setting is turned on before use.
- Do not expose the product to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of disfiguration, damage to the internal components or unstable operation. (Verified operating temperature range: 5° – 40°C, or 41° – 104°F.)
- Do not place vinyl, plastic or rubber objects on the product, since this might discolor the product.
- This instrument has a built-in speaker on the back (terminal side). Do not place any object that is affected by magnetism, such as a watch or magnetic card on the instrument, since that may damage the object.

■ Maintenance

- When cleaning the product, use a soft and dry/slightly damp cloth. Do not use paint thinners, solvents, alcohol, cleaning fluids, or chemical-impregnated wiping cloths.

Information

■ About copyrights

- The copyright of the "content"^{*1} installed in this product belongs to Yamaha Corporation or its copyright holder. Except as permitted by copyright laws and other relevant laws, such as copying for personal use, it is prohibited to "reproduce or divert"^{*2} without the permission of the copyright holder. When

Handling

- Do not insert foreign materials such as metal or paper into any openings or gaps of the product. Failure to observe this may cause a fire, electric shocks, or malfunctions.
- Do not rest your weight on, or place heavy objects on the product, and do not use excessive force on the buttons, switches or connectors.
- Do not use the product or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Remove the power plug from the AC outlet before cleaning the unit. Failure to observe this may cause electric shocks.

using the content, consult with a copyright expert.

If you create music or perform with the contents through the original use of the product, and then record and distribute them, the permission of Yamaha Corporation is not required regardless of whether the distribution method is paid or free of charge.

*1: The word "content" includes a computer program, audio data, Accompaniment Style data, MIDI data, waveform data, voice recording data, music score, and score data, etc.

*2: The phrase "reproduce or divert" includes taking out the content itself in this product, or recording and distributing it without changes in a similar manner.

■ About functions/data bundled with the product

- Some of the preset Songs have been edited for length or arrangement, and may not be exactly the same as the original.

■ About this manual

- The illustrations as shown in this manual are for instructional purposes only.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.

Bluetooth®

- "QR Code" is a registered trademark of DENSO WAVE INCORPORATED.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

■ Tuning

- Unlike an acoustic piano, this instrument does not need to be tuned by an expert (although the pitch can be user-adjusted to match other instruments). This is because the pitch of digital instruments is always maintained perfectly.

■ About disposal

- When disposing of this product, please contact the appropriate local authorities.

Contents

| | | | |
|---|-----------|---|-----------|
| PRECAUTIONS..... | 4 | Listening to Audio playback of the Bluetooth device on this instrument | 12 |
| About the Manuals..... | 7 | | |
| Panel Controls and Terminals | 8 | Backup and Initialization | 15 |
| Setting Up | 9 | Troubleshooting | 15 |
| Power Requirements..... | 9 | Specifications | 16 |
| Turning the Power On/Off..... | 9 | Separately Sold Accessories | 17 |
| Auto Power Off Function..... | 9 | | |
| Using a Footswitch or a Foot pedal..... | 9 | Pedal Functions (For Pedal Unit LP-5A)..... | 17 |
| Functions List | 10 | | |

Using this instrument with smart device apps

You can use the following apps by connecting the instrument to a smart device.



Smart Pianist

By using this instrument with the Smart Pianist app, you can remotely control your digital piano for even more convenience and flexibility.

For information on how to connect the instrument to a smart device and how to use the app, see the Smart Pianist User Guide.

Smart Pianist User Guide
<https://manual.yamaha.com/mi/app/smartpianist/>



Rec'n'Share

Rec'n'Share allows you to record, make videos of, and edit your performances on the instrument and then share them with the world.


To connect the instrument to a smart device, you need a USB cable (Type A - Type B) and a conversion adaptor that matches the connector of the smart device.

For details about each app, refer to the following website.

<https://www.yamaha.com/2/apps/>



Connection example

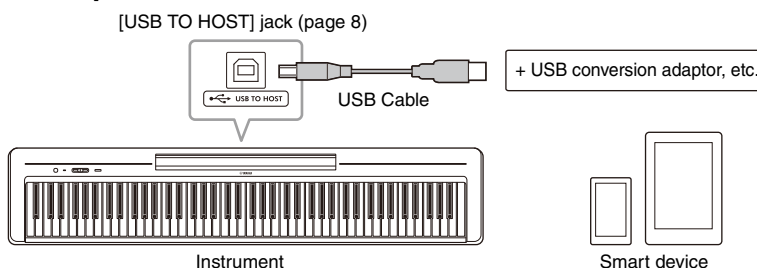

Thank you for choosing this Yamaha digital piano.

This instrument provides exceptionally high-quality sound and expressive control for your playing enjoyment. In order to make the most of the performance potential and features of the instrument, please read the manuals thoroughly, and keep them in a handy place for later reference.

About the Manuals

This instrument has the following documents and instructional materials.

Included Documents



Owner's Manual (this book)

Explains the functions and usage of this instrument.

Online Materials

• Quick Operation Guide

This guide lets you call up various functions on the instrument by pressing certain keys while holding down the [GRAND PIANO/FUNCTION] button (page 10). The Quick Operation Guide lists all of the functions assigned to the keys, and can be printed out and placed it on a music rest for use as a quick reference for important operations.

The Quick Operation Guide can be downloaded directly by using the QR Code below.



<https://manual.yamaha.com/mi/rt/p-145bt/>

• Smart Device Connection Manual

Explains how to connect the instrument to smart devices, such as a smartphone, tablet, etc.

• Computer-related Operations

Includes instructions on connecting this instrument to a computer.

• MIDI Reference

Contains MIDI-related information.

To obtain these manuals, access the Yamaha Downloads website. After selecting your country and clicking on “Manual Library,” enter the model name, etc. to search for the desired files.

Yamaha Downloads

<https://download.yamaha.com/>




NOTE

- For a general overview of MIDI and how you can effectively use it, search for “MIDI Basics” (only in English, German, French and Spanish) on the website above.


Accessories

- Owner's Manual (this book) × 1
- Footswitch × 1
- AC Adaptor* × 1
- Online Member Product Registration × 1
- Music Rest × 1

* May not be included depending on your particular area. Please check with your Yamaha dealer.

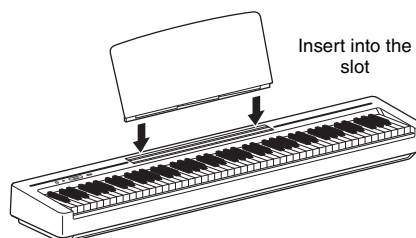

Panel Controls and Terminals

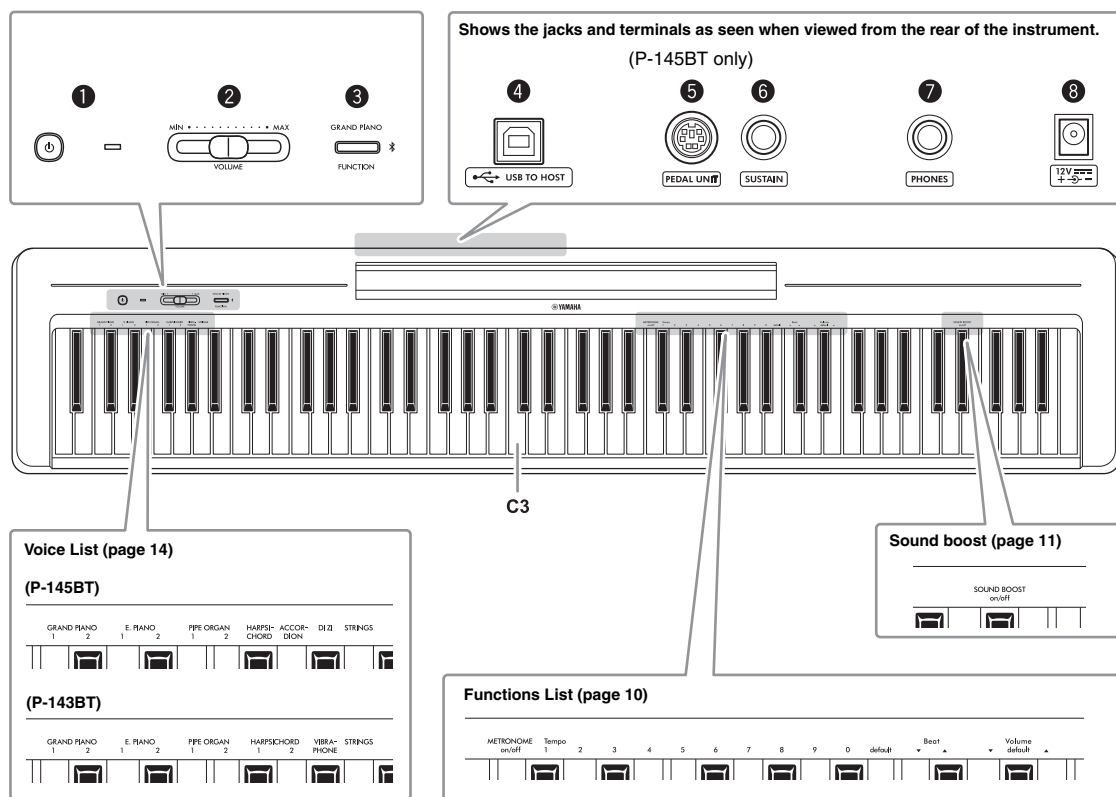

1 [⏻] (Standby/On) switch, Power lamp (page 9)

For turning the power on or setting to standby.

2 [VOLUME] slider

For adjusting the volume of the entire sound.

3 [GRAND PIANO/FUNCTION] button

For instantly calling up the Grand Piano 1 Voice. You can set various parameters by pressing a note on the keyboard while holding this button (page 10). Moreover, holding down this button for longer than three seconds starts pairing between this instrument and a Bluetooth-equipped device (page 12).

4 [USB TO HOST] jack

For connecting to a computer or a smart device using a commercially available USB cable. When connected, you can send and receive both MIDI and audio data, such as playing audio data from a smart device on the instrument and using dedicated applications (page 6).

For details on how to connect the computer or the smart device, refer to “Computer-related Operations” on the website or “Smart Device Connection Manual.”

Notice

- Make sure to use a USB cable (Type A - Type B) of less than 3 meters. USB 3.0 cables cannot be used.

5 [PEDAL UNIT] jack (P-145BT only) (page 17)


For connecting a separately sold pedal unit.

6 [SUSTAIN] jack (page 9)

For connecting the included footswitch, a separately sold footswitch or a separately sold foot pedal.

7 [PHONES] jack (Standard stereo headphone jack)

For connecting a set of standard stereo headphones. The speakers are automatically shut off when a plug is inserted into this jack.

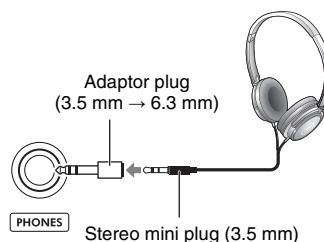

CAUTION

- To protect your hearing, avoid listening with the headphones at a high volume level for long periods of time.


8 DC IN jack (12V) (page 9)

For connecting the AC adaptor.

Setting Up


Power Requirements

Connect the AC adaptor plugs in the following order.

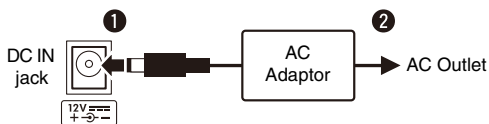

WARNING

- Use the supplied or the specified AC adaptor (page 16) only. Using the wrong AC adaptor can result in damage to the instrument or overheating.
- When using the AC adaptor with a removable plug, make sure to keep the plug attached to the AC adaptor. Using the plug alone can cause electric shock or fire.
- Never touch the metallic section when attaching the plug. To avoid electric shock, short circuit or damage, also be careful that there is no dust between the AC adaptor and plug.

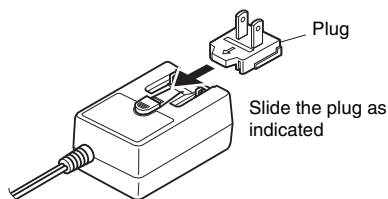

The shape of the plug and outlet differ depending on the locale.


WARNING

- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn the power off and disconnect the plug from the outlet.

NOTE


- Follow this procedure in reverse order when disconnecting the AC adaptor.

Turning the Power On/Off

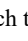- 1 Set the volume to the minimum.
- 2 Press the [] (Standby/On) switch to turn on the power.



When the power is supplied to the instrument, the power lamp located on the right of the power switch is turned on. While playing the keyboard, adjust the volume level by using the [VOLUME] slider.

To turn off the power, press the [] (Standby/On) switch again for a second.


WARNING


- Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.

Auto Power Off Function

To prevent unnecessary power consumption, this function automatically turns the power off if no buttons or keys are operated for approximately 15 minutes. For the settings of the Auto Power Off function, see page 10.


Disabling Auto Power Off (simple method)

While holding down the lowest key (A-1), press the [] (Standby/On) switch. The power turns on with the Auto Power Off function disabled.

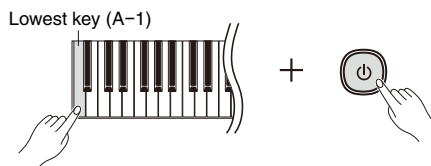

Using a Footswitch or a Foot pedal

 The [SUSTAIN] jack is for connecting the included footswitch, which works in the same way as a damper pedal on an acoustic piano. Also a separately sold foot pedal or footswitch (page 17) can be connected to this jack.



NOTE

- Make sure that power is OFF when connecting or disconnecting the footswitch or pedal.
- Do not press the footswitch when turning the power on. Doing this changes the recognized polarity of the footswitch, resulting in reversed footswitch operation.

Functions List

You can call up a function by holding down the [GRAND PIANO / FUNCTION] button and pressing the specified key. For certain functions, changing the setting produces a confirmation sound. Simply pressing the [GRAND PIANO / FUNCTION] button calls up the Grand Piano 1 Voice.

GRAND PIANO
FUNCTION

While holding down

| Key | Function |
|------|------------------------|
| A#-1 | Current Tempo Value |
| C#0 | Auto Power Off Disable |
| D#0 | Auto Power Off Disable |
| E#0 | Auto Power Off Disable |
| F#0 | Voice No. 1 |
| G#0 | Voice No. 3 |
| A#0 | Voice No. 5 |
| C#1 | Voice No. 6 |
| D#1 | Voice No. 8 |
| E#1 | Voice No. 10 |
| F#1 | Voice No. 2 |
| G#1 | Voice No. 4 |
| A#1 | Voice No. 7 |
| C#2 | Voice No. 9 |
| D#2 | Voice No. 10 |
| F#2 | Song No. 1 |
| G#2 | Song No. 3 |
| A#2 | Song No. 5 |
| B2 | Song No. 6 |
| | Song No. 8 |
| | Song No. 10 |
| | Touch Sensitivity |
| | Duo On/Off |

① ② ③ Voices ④ Voice Demo Song ⑤ Preset Song ⑥ ⑦

| Function | Description | Default Setting |
|--|--|------------------------|
| ① Current Tempo value | Confirms the Current Tempo Value by audible voice (in English). | – |
| ② Auto Power Off | Enables/disables the Auto Power Off function (page 9). | Enabled |
| ③ Voices | Pressing one key selects a specific Voice; pressing two keys simultaneously layers two Voices (Dual). → Voice List (page 14) In Dual mode, the lower numbered Voice is Voice 1 and the higher numbered voice is Voice 2 (→ ⑥, ⑦). To exit from Dual, select another Voice or press the [GRAND PIANO / FUNCTION] button. | – |
| ④ Voice Demo Song ⑤ Preset Song | The selected song will start playing, followed by the Voice Demo Songs or Preset Songs in order. → Demo Song List / Preset Song List (page 14) To stop playback, press the [GRAND PIANO / FUNCTION] button. To play back the selected Song repeatedly While holding down the [GRAND PIANO / FUNCTION] button, press and hold one of the specified keys until you hear the confirmation sound twice (⑫). | – |
| ⑥ Touch Sensitivity | Determines how the sound responds to your playing strength. Each press of the key switches the setting in sequence: Soft (1), Medium (2), Hard (3) and Fixed (4). → Touch Sensitivity List (page 14) | 2 (Medium) |
| ⑦ Duo On/Off | Engages or exits from the Duo function, which allows two different players to play the instrument in the same octave range, on the left and right side with the E3 key as the boundary. | Off |
| ⑧ Reverb Type | Selects the Reverb type which simulate the reverberation of different performance spaces. → Reverb Type List (page 14) | Depending on the Voice |
| ⑨ Reverb Depth | Adjusts the Reverb depth. Setting range: 0 (no effect) – 10 (maximum depth) | Depending on the Voice |
| ⑩ Damper Resonance On/Off | Turns the Damper Resonance effect on/off. The Damper Resonance effect simulates the resonance of the strings of an acoustic piano when its damper pedal is pressed. | On |
| ⑪ Transpose | Transposes the pitch up or down in semitones. Setting range: –6 – 0 – +6 | 0 |
| ⑫ Metronome | Start/stop the Metronome. | Off (stop) |



You can also change the settings from the Smart device by using the Smart Pianist app.
(→ page 6)



METRONOME Tempo on/off 1 2 3 4 5 6 7 8 9 0 default Beat Volume default

SOUND BOOST on/off

| | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------|----------------|----------------|----------------|-------------------------|-----------------------|--------------|--------------|--------------|--------------|--------------|------------------|--------------------------|------------------------|-------------------------|-------------------------|---------------------|---------------------|---------------------|---------------------|------------------------|-------------------------|-------------------------|--------------------------------------|-------------------------|--------------------------------------|----|----|
| Hall 1 | Hall 2 | D#3 | F#3 | G#3 | A#3 | C#4 | D#4 | F#4 | G#4 | A#4 | C#5 | D#5 | F#5 | G#5 | A#5 | C#6 | D#6 | F#6 | G#6 | A#6 | | | | | | | |
| Room | Stage | Reverb Depth - | Reverb Depth + | Damper Resonance On/Off | Transpose 0 (Default) | Number key 1 | Number key 3 | Number key 6 | Number key 8 | Number key 0 | Metronome Beat + | Default Metronome Volume | Volume Balance Default | Volume Balance (Dual) - | Volume Balance (Dual) + | Octave -1 (Voice 2) | Octave +1 (Voice 2) | Octave -1 (Voice 1) | Octave +1 (Voice 1) | Audio Loop Back On/Off | Tuning -0.2 Hz | Tuning +0.2 Hz | MIDI Transmit Channel - | MIDI Transmit Channel + | Operation Confirmation Sounds On/Off | | |
| Off | Reverb Depth - | Reverb Depth + | Transpose - | Transpose + | Metronome On/Off | Number key 2 | Number key 4 | Number key 5 | Number key 7 | Number key 9 | Metronome Beat - | Metronome Volume - | Metronome Volume + | Volume Balance (Dual) - | Volume Balance (Dual) + | Octave -1 (Voice 1) | Octave +1 (Voice 1) | Sound Boost On/Off | A3 = 440.0 Hz | A3 = 442.0 Hz | MIDI Transmit Channel - | MIDI Transmit Channel + | Operation Confirmation Sounds On/Off | | | | |
| D3 | E3 | F3 | G3 | A3 | B3 | C4 | D4 | E4 | F4 | G4 | A4 | B4 | C5 | D5 | E5 | F5 | G5 | A5 | B5 | C6 | D6 | E6 | F6 | G6 | A6 | B6 | C7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | | | | | | | | | | | | | |

| Function | Description | Default Setting |
|--|---|--|
| 13 Tempo | Changes the tempo of Song playback or the Metronome. The number key is used to specify the tempo numerically. To specify "70," press the G4 (Number key 7) and A#4 (Number key 0) keys in order while holding down [GRAND PIANO / FUNCTION]. Setting range: 32 – 280 | 120 (Metronome) |
| 14 Metronome Beat | Selects a Metronome Beat from 0 and 2 – 6. Setting range: 0 (no beat), 2, 3, 4, 5, 6 | 0 (no beat) |
| 15 Metronome Volume | Adjusts the Metronome Volume. Setting range: 1 – 20 | 10 |
| 16 Volume Balance (Dual) | Adjusts the Balance between two Voices in Dual (3). The Settings above "0" increase the volume of Voice 1, and vice versa. Setting range: -6 – +6 | Depending on the combination of Voices |
| 17 Octave Shift (Dual/Duo) | Shifts the octave for each Voice in Dual (3) or Duo (7). In Duo, the right-hand range is Voice 1, while the left-hand range is Voice 2. In Dual, the Voice assigned to the left key becomes Voice 1. Setting range: -1, 0, +1 | Depending on the combination of Voices |
| 18 Sound Boost On/Off | Raises the volume and enhances the overall sound presence. This function is particularly useful when you want all the notes you play—both loud and soft—to be clearly audible. | Off |
| 19 Audio Loop Back On/Off | Sets whether the audio sound input from the [USB TO HOST] terminal is returned to the computer/smart device or not, along with the performance played on the instrument. | On |
| 20 Tuning | Fine tunes the pitch of the entire instrument in approx. 0.2 Hz increments. Setting range: 414.8 Hz – 440.0 Hz – 466.8 Hz | A3 = 440.0 Hz |
| 21 MIDI Transmit Channels | Sets the MIDI Transmit Channels. For details, refer to "MIDI Reference" on the Yamaha website (page 7). Setting range: 1 – 16 | 1 |
| 22 Operation Confirmation Sounds On/Off | Turns on/off the Operation Confirmation Sounds, which occur when you change a setting using the keys of the keyboard. | On |

Listening to Audio playback of the Bluetooth device on this instrument

Connecting a Bluetooth-equipped device, such as a smartphone or portable audio player, to this instrument enables audio playback from that connected device through the instrument (Bluetooth Audio function).

Before using the Bluetooth function, be sure to read “About Bluetooth®” on page 13.

IMPORTANT

Even while playing audio playback from a Bluetooth-equipped device through the instrument, the instrument will automatically turn off if it is not operated for 15 minutes, due to the Auto Power Off function. If desired, disable the Auto Power Off function, see page 9.

NOTE

- This instrument cannot transmit audio data to Bluetooth-equipped devices via Bluetooth.
- Bluetooth headphones or Bluetooth speakers cannot be connected or used with this instrument.
- Smart device apps such as Smart Pianist cannot be used via the Bluetooth Audio function described here.
- Only one Bluetooth-equipped device can be connected to this instrument at a time (although up to 8 devices can be paired to this instrument). When pairing with the 9th device has succeeded, pairing data for the device with the oldest connection date will be deleted.

1. Hold down the [GRAND PIANO/FUNCTION] button for three seconds or longer to pair with a Bluetooth-equipped device (Pairing*).

* Pairing: Refers to registering this instrument on a Bluetooth-equipped device to establish mutual recognition for wireless communication between the two.

If you wish to connect your Bluetooth-equipped device to the instrument, the device needs to be paired with the instrument first.



The instrument's power lamp flashes while it is in pairing mode.

To cancel the pairing operation, press the [GRAND PIANO/FUNCTION] button once more.

2. On the Bluetooth-equipped device such as a smartphone, set the Bluetooth function to on and select the instrument “P-145BT Audio” or “P-143BT Audio” from the connection list.

After selecting this instrument from the connection list on your Bluetooth-equipped device, the pairing is completed. Make sure to complete this operation while the instrument's power lamp is flashing (within five minutes).

3. Play back audio data on the Bluetooth-equipped device to confirm that the instrument can output the audio sound.

Disconnecting the current Bluetooth connection is done by turning off the Bluetooth function on the Bluetooth-equipped device or disconnecting the instrument from the Bluetooth-equipped device.

When you turn on the instrument the next time, the last-connected Bluetooth-equipped device will be connected to this instrument automatically, if the Bluetooth function of the Bluetooth-equipped device is set to on. To disable auto connection of Bluetooth-equipped device to the instrument, delete the pairing information from the Bluetooth-equipped device.

If you cannot pair or connect your Bluetooth-equipped device to the instrument:

- Check that the Bluetooth function of the Bluetooth-equipped device is activated and select this instrument again from the connection list on your device.
- The device you are trying to connect to the instrument may be connected via Bluetooth to a device other than this instrument. Disconnect from the currently connected device.
- If the instrument is already paired with multiple devices, it may automatically be connected to an unintended device. If this occurs, disconnect the nearby device unintended for Bluetooth connection from the instrument, and then select this instrument from the connection list on your device. Alternatively, begin the pairing process again.
- In case there is a device (microwave oven, wireless LAN device, etc.) that outputs signals in the 2.4 GHz frequency band nearby, move this instrument away from the device that is emitting radio-frequency signals.

About Bluetooth®

Bluetooth is a technology for wireless communication between devices within an area of about 10 meters (33 ft.) employing the 2.4 GHz frequency band.

■ **Handling Bluetooth communications**

- The 2.4 GHz band used by Bluetooth compatible devices is a radio band shared by many types of equipment. While Bluetooth compatible devices use a technology minimizing the influence of other components using the same radio band, such influence may reduce the speed or distance of communications and in some cases interrupt communications.
- The speed of signal transfer and the distance at which communication is possible differs according to the distance between the communicating devices, the presence of obstacles, radio wave conditions and the type of equipment.
- Yamaha does not guarantee all wireless connections between this unit and devices compatible with Bluetooth function.

Voice List

| No. | Key | Voice Name | Description |
|-----|-----|--------------------------|---|
| 1 | C0 | GRAND PIANO 1 | Recorded samples from a full concert grand piano. Perfect for classical compositions as well as any other style that requires acoustic piano. |
| 2 | C#0 | GRAND PIANO 2 | Bright piano sound. Clear tone helps the sound to "cut through" when playing in an ensemble. |
| 3 | D0 | E. PIANO 1 | Vintage electric piano sound of hammerstruck metallic "tines." Soft tone when played lightly, and an aggressive tone when played hard. |
| 4 | D#0 | E. PIANO 2 | An electronic piano sound created by FM synthesis. Good for standard popular music. |
| 5 | E0 | PIPE ORGAN 1 | A typical pipe organ sound (8 feet + 4 feet + 2 feet). Good for sacred music from the Baroque period. |
| 6 | F0 | PIPE ORGAN 2 | This is the organ's full coupler sound, often associated with Bach's "Tocatta and Fugue." |
| 7 | F#0 | P-145BT HARPSICHORD | The definitive instrument for baroque music. Authentic harpsichord sound, with plucked strings, no touch response. |
| | | P-143BT HARPSICHORD 1 | |
| 8 | G0 | P-145BT ACCORDION | An accordion sound often used for tango and chanson music. |
| | | P-143BT HARPSICHORD 2 | Mixes the same Voice an octave higher for a more brilliant, dynamic tone. |
| 9 | G#0 | P-145BT DI ZI | Chinese transverse flute. It features a clear and a crisp sound. |
| | | P-143BT VIBRAPHONE | Played with relatively soft mallets. |
| 10 | A0 | STRINGS | Spacious and large-scale string ensemble. Try combining this Voice with piano in Dual. |

Preset Song List

| No. | Key | Title | Composer |
|-----|-----|--------------------------------|------------------|
| 1 | C2 | Menuett G dur BWV Anh.114 | J. S. Bach |
| 2 | C#2 | Turkish March | W. A. Mozart |
| 3 | D2 | Für Elise | L. v. Beethoven |
| 4 | D#2 | Valse op.64-1 "Petit chien" | F. F. Chopin |
| 5 | E2 | Träumerei | R. Schumann |
| 6 | F2 | Dolly's Dreaming and Awakening | T. Oesten |
| 7 | F#2 | Arabesque | J. F. Burgmüller |
| 8 | G2 | Humoresque | A. Dvořák |
| 9 | G#2 | The Entertainer | S. Joplin |
| 10 | A2 | La Fille aux Cheveux de Lin | C. A. Debussy |

Demo Song List

| No. | Key | Voice Name | Title | Composer |
|-----|-----|--------------------------|-----------------|------------|
| 1 | C1 | GRAND PIANO 1 | Original | – |
| 2 | C#1 | GRAND PIANO 2 | Original | – |
| 3 | D1 | E. PIANO 1 | Original | – |
| 4 | D#1 | E. PIANO 2 | Original | – |
| 5 | E1 | PIPE ORGAN 1 | Original | – |
| 6 | F1 | PIPE ORGAN 2 | Original | – |
| 7 | F#1 | P-145BT HARPSICHORD | Gavotte | J. S. Bach |
| | | P-143BT HARPSICHORD 1 | Gavotte | J. S. Bach |
| 8 | G1 | P-145BT ACCORDION | Original | – |
| | | P-143BT HARPSICHORD 2 | Invention No. 1 | J. S. Bach |
| 9 | G#1 | P-145BT DI ZI | Original | – |
| | | P-143BT VIBRAPHONE | Original | – |
| 10 | A1 | STRINGS | Original | – |

The Demo Songs excluding original Songs are short rearranged excerpts from the original compositions. The original Demo Songs are Yamaha originals (© Yamaha Corporation).

Touch Sensitivity List

| Voice Confirmation | Touch Sensitivity | Description |
|--------------------|-------------------|--|
| 1 | Soft | The volume level does not change much when you play the keyboard soft or hard. |
| 2 | Medium | This is the standard piano touch response (default setting). |
| 3 | Hard | The volume level changes very widely from pianissimo to fortissimo to facilitate dynamic and dramatic expression. You have to hit the keys hard to produce a loud sound. |
| 4 | Fixed | The volume level does not change at all regardless of whether you play the keyboard soft or hard. |

Touch Sensitivity cannot be used for pipe organ Voices and harpsichord Voices.

Reverb Type List

| Key | Reverb Type | Description |
|-----|-------------|---|
| C3 | Hall1 | For a bigger reverb sound. This effect simulates the natural reverberation of a small-size concert hall. |
| C#3 | Hall2 | For a truly spacious reverb sound. This effect simulates the natural reverberation of a large concert hall. |
| D3 | Room | Simulates the reverb you hear in a room. |
| D#3 | Stage | Simulates the reverb of a stage environment. |
| E3 | Off | No effect is applied. |

Backup and Initialization

The following backup parameters will automatically be maintained even if you turn off the power.

Backup parameters


Metronome Volume, Metronome Beat, Touch Sensitivity, Tuning, Auto Power Off, Operation Confirmation Sound on/off, Bluetooth pairing information

NOTE

- Tempo settings are not backed up.

To initialize the backup parameters:

While holding down the C7 key (highest key), turn the power on to initialize the backup data to the factory initial settings.

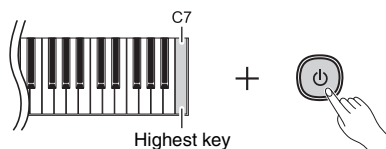

NOTICE

- **Never turn off the power while the initialization is being executed.**

NOTE

- If this instrument somehow malfunctions or fails to operate properly, try executing the initialization.
- Bluetooth pairing information (page 12) will not be lost even when the initializing is executed.

Troubleshooting

| Problem | Possible Cause and Solution |
|---|--|
| The instrument does not turn on. | The instrument has not been plugged in properly. Securely insert the female plug into the jack on the instrument, and the male plug into a proper AC outlet (page 9). |
| The instrument is automatically turned off even if no operation is done. | This is normal and due to the Auto Power Off function. Even if audio is being played back from a smart device or another device connected to the instrument via USB cable or Bluetooth, the instrument will automatically turn off if it is not operated. If you want to prevent this from happening, disable the Auto Power Off function (page 9). |
| Noise is heard from the speakers or headphones. | The noise may be due to interference caused by the use of a mobile phone in close proximity to this instrument. Turn off the mobile phone, or move it further away from this instrument. When you use the instrument along with the application on your smart device, we recommend that you set "Airplane Mode" to "ON" on your smart device in order to avoid noise caused by communication. |
| The overall volume is low, or no sound is heard. | The Master Volume is set too low. Set it to an appropriate level using the [VOLUME] slider (page 8). Make sure a pair of headphones or conversion adaptor is not connected to the [PHONES] jack (page 8). |
| The pedal has no effect. | The pedal cable/plug may not be properly connected. Turn off the power and make sure to securely insert the pedal plug into the [SUSTAIN] jack or [PEDAL UNIT] jack (page 9, 17). |
| The footswitch (for sustain) seems to produce the opposite effect. For example, pressing the footswitch cuts off the sound and releasing it sustains the sounds. | The polarity of the footswitch is reversed because the footswitch was pressed when the power was turned on. Turn off the power and turn it on again to reset the function. Make sure to not press the footswitch when turning the power on. |
| When connecting the computer or smart device to the instrument's [USB TO HOST] jack with a USB cable and playing back audio data, no sound comes out from the instrument or noise occurs. | Depending on the model or OS of the computer and smart device, communication may not be possible. |

Specifications

| | | P-145BT | P-143BT |
|----------------------|---|--|---|
| Product Name | | Digital Piano | |
| Size/Weight | Dimensions (W × H × D) | 1,326 × 129 × 268 (mm) (52-3/16" × 5-1/16" × 10-9/16") | |
| | Weight | 11.1 kg (24 lb, 8 oz) | |
| Control Interface | Keyboard | Number of Keys | 88 keys |
| | | Type | GHC (Graded Hammer Compact) keyboard with matte black keytops |
| | | Touch Sensitivity | Soft/Medium/Hard/Fixed |
| | Panel | Language | English |
| Voices | Tone Generator | Piano Sound | Yamaha CFIIIS |
| | Piano Effect | Damper Resonance | Yes |
| | Polyphony (max.) | | 64 |
| | Preset | Number of Voices | 10 |
| Effects | Types | Reverb | 4 types |
| | | Sound Boost | Yes |
| Songs (MIDI) | Preset | Number of Preset Songs | 10 Voice Demo Songs + 10 Piano Preset Songs |
| Functions | Voices | Dual | Yes |
| | | Duo | Yes |
| | | Metronome | Yes |
| | Overall Controls | Tempo Range | 32 – 280 |
| | | Transpose | -6 – 0 – +6 |
| | | Tuning | 414.8 – 440.0 – 466.8 Hz (approx. 0.2 Hz increments) |
| | | USB audio interface | 44.1 kHz, 16 bit, stereo |
| | | Bluetooth version | 5.0 |
| | Bluetooth (Audio only) | Supported profile | A2DP |
| | | Compatible codec | SBC |
| | | Wireless output | Bluetooth Class 2 |
| | | Maximum communication distance | Approx. 10 m |
| | | Radio Frequency | 2,401 – 2,481 MHz |
| | | Maximum output power (EIRP) | 4 dBm |
| | | Type of modulation | GFSK |
| Connectivity | DC IN | 12 V | |
| | PHONES | Standard stereo headphone jack (× 1) | |
| | SUSTAIN | Yes | |
| | PEDAL UNIT | Yes | No |
| | USB TO HOST | Yes (MIDI/Audio) | |
| Sound System | Amplifiers | 7 W × 2 | |
| | Speakers | Oval (12 cm × 8 cm) × 2 | |
| Power Supply | AC Adaptor | AC Adaptor PA-150 or an equivalent recommended by Yamaha (Output : DC 12 V, 1.5 A) | |
| | Power Consumption | 6 W (When using the PA-150 adaptor) | |
| | Standby Power Consumption | 0.3 W | |
| | Auto Power Off | Yes | |
| Included Accessories | <ul style="list-style-type: none"> • Owner's Manual (this book) • Footswitch • AC Adaptor PA-150 or an equivalent recommended by Yamaha* • Online Member Product Registration • Music Rest <p>* May not be included depending on your particular area. Please check with your Yamaha dealer.</p> | | |


The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Specifications, equipment or separately sold accessories may not be the same in every locale, and the models available on the market also may vary by region. Please check with your Yamaha dealer.

Separately Sold Accessories

May not be available depending on your locale.

- AC Adaptor: PA-150 or an equivalent recommended by Yamaha
- Headphone: HPH-150, HPH-100, HPH-50
- Keyboard Stand: L-100
- Keyboard bag: SC-KB851
- Wireless MIDI Adaptor: UD-BT01
- Footswitch: FC4A, FC5
- Foot pedal: FC3A (features Half-pedal function)

- [P-145BT only] Pedal Unit: LP-5A (features Half-pedal function)
- * Make sure to assemble the unit on a separately sold Keyboard Stand (L-100).

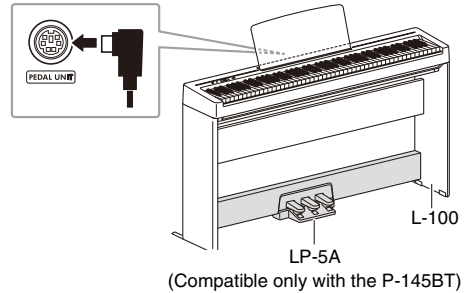

Half-pedal function

This function allows you to vary the sustain length depending on how far the Damper pedal is pressed. The farther down you press the pedal, the more the sound sustains. For example, if you press the damper pedal and all notes you are playing sound a bit murky and loud with too much sustain, you can release the pedal half way or higher to decrease the sustain (murkiness).


Pedal Functions (For Pedal Unit LP-5A)

Damper pedal (right pedal)

Notes will be sustained as long as this pedal is depressed, even if you release your fingers from the keys. It corresponds to the Damper Resonance function. The deeper you depress the pedal, the longer the note is sustained (corresponding to the Half Pedal function).

Sostenuto pedal (center pedal)

If you play a note or chord on the keyboard and press the sostenuto pedal while holding the note(s), the notes will sustain as long as the pedal is held. Since this pedal does not affect notes played while it is depressed, you can achieve playing styles such as a staccato melody while sustaining a chord.

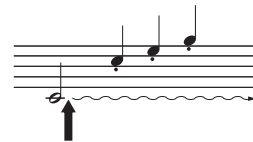

When you press the sostenuto pedal here while holding the note(s), the notes will sustain as long as you hold the pedal.

Soft pedal (left pedal)

Keys played after depressing this pedal will be slightly softer and less resonant. The effect continues as long as the pedal is depressed. Since this pedal does not affect the sound of keys that were already held down when it is depressed, depress the pedal just before playing the note(s) that you would like to alter.

Pedal function in Duo (page 10)

In Duo, the pedal function changes as follows.

- **Right Pedal:** Damper pedal for the right-hand range.
- **Center Pedal:** Damper pedal for both the right-hand and left-hand ranges.
- **Left Pedal:** Damper pedal for the left-hand range.

For European Union and United Kingdom

| | |
|-----------|---|
| EN | SIMPLIFIED EU DECLARATION OF CONFORMITY / SIMPLIFIED UK DECLARATION OF CONFORMITY |
| | Hereby, Yamaha Corporation declares that the radio equipment type [P-145BT, P-143BT] is in compliance with Directive 2014/53/EU and the radio equipment regulations of UK. The full texts of the EU declaration of conformity and the UK declaration of conformity are available at the following internet address: https://europe.yamaha.com/en/support/compliance/doc.html |
| FR | DECLARATION UE DE CONFORMITE SIMPLIFIEE |
| | Le soussigné, Yamaha Corporation, déclare que l'équipement radioélectrique du type [P-145BT, P-143BT] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://europe.yamaha.com/en/support/compliance/doc.html |
| DE | VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG |
| | Hiermit erklärt Yamaha Corporation, dass der Funkanlagentyp [P-145BT, P-143BT] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://europe.yamaha.com/en/support/compliance/doc.html |
| SV | FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE |
| | Härmed försäkrar Yamaha Corporation att denna typ av radioustrüstning [P-145BT, P-143BT] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://europe.yamaha.com/en/support/compliance/doc.html |
| IT | DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA |
| | Il fabbricante, Yamaha Corporation, dichiara che il tipo di apparecchiatura radio [P-145BT, P-143BT] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://europe.yamaha.com/en/support/compliance/doc.html |
| ES | DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA |
| | Por la presente, Yamaha Corporation declara que el tipo de equipo radioeléctrico [P-145BT, P-143BT] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://europe.yamaha.com/en/support/compliance/doc.html |
| PT | DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA |
| | O(a) abaixo assinado(a) Yamaha Corporation declara que o presente tipo de equipamento de rádio [P-145BT, P-143BT] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://europe.yamaha.com/en/support/compliance/doc.html |
| NL | VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING |
| | Hierbij verklaar ik, Yamaha Corporation, dat het type radioapparatuur [P-145BT, P-143BT] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://europe.yamaha.com/en/support/compliance/doc.html |
| BG | ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ |
| | С настоящото Yamaha Corporation декларира, че този тип радиосъоръжение [P-145BT, P-143BT] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://europe.yamaha.com/en/support/compliance/doc.html |
| CS | ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ |
| | Tímto Yamaha Corporation prohlašuje, že typ rádiového zařízení [P-145BT, P-143BT] je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://europe.yamaha.com/en/support/compliance/doc.html |
| DA | FORENKLET EU-OVERENSSTEMMELSESESKLÆRING |
| | Hermed erklærer Yamaha Corporation, at radioudrustningen [P-145BT, P-143BT] er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseerklæringens fulde tekst kan findes på følgende internetadresse: https://europe.yamaha.com/en/support/compliance/doc.html |

| | |
|-----------|---|
| ET | LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON |
| | Käesolevaga deklareerib Yamaha Corporation, et käesolev raadioseadme tüüp [P-145BT, P-143BT] vastab direktiivile 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://europe.yamaha.com/en/support/compliance/doc.html |
| EL | ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ |
| | Με την παρούσα ο/η Yamaha Corporation, δηλώνει ότι ο ραδιοεξοπλισμός [P-145BT, P-143BT] πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://europe.yamaha.com/en/support/compliance/doc.html |
| HR | POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI |
| | Yamaha Corporation ovime izjavljuje da je radijska oprema tipa [P-145BT, P-143BT] u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://europe.yamaha.com/en/support/compliance/doc.html |
| LV | VIENTKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA |
| | Ar šo Yamaha Corporation deklarē, ka radioiekārta [P-145BT, P-143BT] atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://europe.yamaha.com/en/support/compliance/doc.html |
| LT | SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA |
| | Aš, Yamaha Corporation, patvirtinu, kad radijo įrenginių tipas [P-145BT, P-143BT] atitinka Direktivą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://europe.yamaha.com/en/support/compliance/doc.html |
| HU | EGYSZERŰSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT |
| | Yamaha Corporation igazolja, hogy a [P-145BT, P-143BT] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://europe.yamaha.com/en/support/compliance/doc.html |
| PL | UPROSZCZONA DEKLARACJA ZGODNOŚCI UE |
| | Yamaha Corporation niniejszym oświadcza, że typ urządzenia radiowego [P-145BT, P-143BT] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://europe.yamaha.com/en/support/compliance/doc.html |
| RO | DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ |
| | Prin prezenta, Yamaha Corporation declară că tipul de echipamente radio [P-145BT, P-143BT] este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://europe.yamaha.com/en/support/compliance/doc.html |
| SK | ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE |
| | Yamaha Corporation týmto vyhlasuje, že rádiové zariadenie typu [P-145BT, P-143BT] je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://europe.yamaha.com/en/support/compliance/doc.html |
| SL | POENOSTAVLJENA IZJAVA EU O SKLADNOSTI |
| | Yamaha Corporation potrjuje, da je tip radijske opreme [P-145BT, P-143BT] skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://europe.yamaha.com/en/support/compliance/doc.html |
| FI | YKSINKERTAISTETTU EU-VAATIMUSTENMUKAISUUSVAKUUTUS |
| | Yamaha Corporation vakuuttaa, että radiolaitetyypin [P-145BT, P-143BT] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://europe.yamaha.com/en/support/compliance/doc.html |
| TR | BASİTLEŞTİRİLMİŞ AVRUPA BİRLİĞİ UYGUNLUK BİLDİRİMİ |
| | İşbu belge ile, Yamaha Corporation, radyo cihaz tipinin [P-145BT, P-143BT], Direktif 2014/53/ AB'ye uygunluğunu beyan eder. AB uyumu beyanının tam metni aşağıdaki internet adresinden edinilebilir: https://europe.yamaha.com/en/support/compliance/doc.html |

(559-M01 RED DoC URL 03)

Important Notice: Power management information for customers in European Economic Area (EEA), Switzerland and Turkey

Remarque importante : Informations sur la gestion de l'alimentation pour les clients de l'Espace économique européen (EEE), de Suisse et de Turquie

| | |
|---|--------------------|
| Yamaha products are equipped with a power management function. Some products allow you to disable that function, or to extend the amount of time that elapses before the power is turned off or set to standby. In these cases, energy consumption will increase. | English |
| Yamaha-Produkte sind mit einer Power-Management-Funktion ausgestattet. Bei einigen Produkten können Sie diese Funktion ausschalten oder die Zeitdauer, die verstreicht, bis das Instrument ausgeschaltet oder in Bereitschaft versetzt wird, verlängern. In diesen Fällen erhöht sich der Energieverbrauch. | Deutsch |
| Les produits Yamaha sont équipés d'une fonction de gestion de l'alimentation. Certains produits vous permettent de désactiver cette fonction ou d'allonger le délai avant la mise hors tension ou la mise en veille. Dans ces cas, la consommation d'énergie augmente. | Français |
| Yamaha-producten zijn uitgerust met een energiebeheerfunctie. Bij sommige producten kunt u die functie uitschakelen of de tijd verlengen die verstrijkt voordat de stroom wordt uitgeschakeld of in stand-by wordt gezet. In deze gevallen zal het energieverbruik toenemen. | Nederlands |
| Los productos Yamaha están equipados con una función de administración de energía. Algunos productos permiten desactivar esa función o ampliar el tiempo que transcurre antes de apagar la alimentación o poner el producto en modo de espera. En estos casos, el consumo de energía aumentará. | Español |
| I prodotti Yamaha sono dotati di una funzione di gestione dell'alimentazione. Alcuni prodotti consentono di disattivare tale funzione o di estendere il periodo di tempo che trascorre prima che l'alimentazione venga spenta o impostata in standby. In questi casi, il consumo energetico aumenterà. | Italiano |
| Os produtos Yamaha são equipados com uma função de gerenciamento de energia. Alguns produtos permitem desativar essa função ou estender o tempo decorrido antes de se desligar ou entrar em standby. Nesses casos, o consumo de energia aumentará. | Português |
| Τα προϊόντα της Yamaha είναι εξοπλισμένα με μια λειτουργία διαχείρισης ισχύος. Ορισμένα προϊόντα σας δίνουν τη δυνατότητα να απενεργοποιείτε αυτή τη λειτουργία ή να επεκτείνετε το χρονικό διάστημα μέχρι την απενεργοποίηση ή τη θέση σε κατάσταση αναμονής. Σε αυτές τις περιπτώσεις, η κατανάλωση ενέργειας θα αυξηθεί. | Ελληνικά |
| Yamaha-produkterna är utrustade med en energihanteringsfunktion. För vissa produkter kan du inaktivera den funktionen eller för att förlänga tiden som förflutit innan strömmen stängs av eller ställs i vänteläge. I dessa fall ökar energiförbrukningen. | Svenska |
| Yamahas produkter har en strømstyringsfunktion. På nogle produkter er det muligt at deaktivere denne funktion eller at forlænge den tid, der går, før der slukkes for strømmen, eller sættes på standby. I disse tilfælde vil strømforbruget stige. | Dansk |
| Yamaha-tuotteet on varustettu virranhallintatoiminnolla. Joissakin tuotteissa voit poistaa toiminnon käytöstä tai pidentää aikaa, joka kuluu ennen virran katkaisemista tai valmiustilaan asettamista. Näissä tapauksissa energiankulutus kasvaa. | Suomi |
| Produkty Yamaha są wyposażone w funkcję zarządzania energią. Niektóre produkty umożliwiają wyłączenie tej funkcji lub wydłużenie czasu, jaki upływa do wyłączenia zasilania lub przejścia w tryb gotowości. W takich przypadkach zużycie energii wzrośnie. | Polski |
| Produkty Yamaha jsou vybaveny funkcí správy napájení. Některé produkty umožňují tuto funkci zakázat nebo prodloužit dobu, která má uběhnout před vypnutím napájení nebo pohotovostním režimem. V těchto případech se zvýší spotřeba elektřiny. | Čeština |
| A Yamaha termékek energiamedzsziget funkcióval vannak ellátva. Egyes termékek lehetővé teszik, hogy letiltsa ezt a funkciót, vagy meghosszabbítsa a kikapcsolás vagy készenléti állapothoz helyezés előtt eltelt időt. Ezekben az esetekben az energiafogyasztás növekedni fog. | Magyar |
| Yamaha tooted on varustatud toitehalduse funktsiooniga. Mõned tooted võimaldavad teil selle funktsiooni keelata või pikendada aega, mis möödub enne toite väljalülitamist või ooterežiimi seadmist. Sellistel juhtudel suureneb energiatarbimine. | Eesti |
| Yamaha izstrādājumi ir aprīkoti ar barošanas pārvaldības funkciju. Dažiem izstrādājumiem šo funkciju var atspējot vai paildzināt laiku, kam jāpaiet pirms barošanas atslēgšanas vai pāriesšanas gaidstāves režīmā. Šādā gadījumā palielināsies enerģijas patēriņš. | Latviešu |
| „Yamaha“ gaminiuose yra energijos sąnaudų valdymo funkcija. Kai kurie gaminiai leidžia išjungti šią funkciją arba pratęsti laiką, praėjusį prieš išjungiant maitinimą arba įjungiant budėjimo režimą. Tokiais atvejais energijos suvartojimas padidės. | Lietuvių |
| Produkty spoločnosti Yamaha sú vybavené funkciou správy napájania. Niektoré produkty vám umožňujú túto funkciu vypnúť alebo predĺžiť čas, po uplynutí ktorých sa napájanie vypne alebo nastaví do pohotovostného režimu. V takýchto prípadoch sa zvýši spotreba energie. | Slovenčina |
| Yamahini izdelki imajo funkcijo upravljanja z napajanjem. Nekateri izdelki vam omogočajo, da onemogočite to funkcijo ali podaljšate čas, ki mora preteči, preden se napajanje izklopi ali nastavi v stanje pripravljenosti. V teh primerih se bo poraba energije povečala. | Slovenščina |
| Продуктите на Yamaha са снабдени с функция за управление на захранването. Някои продукти ви позволяват да забраните тази функция или да удължите времето, което ще изтече, преди захранването да се изключи или да се настрои в режим на готовност. В тези случаи консумацията на енергия ще се увеличи. | Български |
| Produsele Yamaha sunt echipate cu o funcție de gestionare a energiei. Unele produse vă permit să dezactivați această funcție sau să prelungiți perioada de timp care trece înainte ca alimentarea să fie oprită sau setată în standby. În aceste cazuri, consumul de energie va crește. | Română |
| Yamaha proizvodi opremljeni su funkcijom upravljanja potrošnjom energije. Neki vam proizvodi omogućuju onemogućavanje te funkcije ili produženje vremena koje protekne prije isključivanja napajanja ili postavljanja u stanje pripravnosti. U tim će se slučajevima povećati potrošnja energije. | Hrvatski |
| Yamaha ürünlerinde güç yönetimi işlevi vardır. Bazı ürünler, bu işlevi devre dışı bırakmanıza veya güç kapatılmadan ya da bekleme moduna alınmadan önce geçen süreyi uzatmanıza olanak tanır. Bu gibi durumlarda, enerji tüketimi artacaktır. | Türkçe |

(574-M06 EU erp 01)

Yamaha Worldwide Representative Offices

English

For details on the product(s), contact your nearest Yamaha representative or the authorized distributor, found by accessing the 2D barcode below.

Deutsch

Wenden Sie sich für nähere Informationen zu Produkten an eine Yamaha-Vertretung oder einen autorisierten Händler in Ihrer Nähe. Diese finden Sie mithilfe des unten abgebildeten 2D-Strichodes.

Français

Pour obtenir des informations sur le ou les produits, contactez votre représentant ou revendeur agréé Yamaha le plus proche. Vous le trouverez à l'aide du code-barres 2D ci-dessous.

Español

Para ver información detallada sobre el producto, contacte con su representante o distribuidor autorizado Yamaha más cercano. Lo encontrará escaneando el siguiente código de barras 2D.

Português

Para mais informações sobre o(s) produto(s), fale com seu representante da Yamaha mais próximo ou com o distribuidor autorizado acessando o código de barras 2D abaixo.

Русский

Чтобы узнать подробнее о продукте (продуктах), свяжитесь с ближайшим представителем или авторизованным дистрибьютором Yamaha, воспользовавшись двухмерным штрихкодом ниже.

Bahasa Indonesia

Untuk detail produk, hubungi perwakilan Yamaha terdekat atau distributor resmi Anda dengan mengakses barcode 2D di bawah ini.

简体中文

如需有关产品的详细信息,请联系距您最近的 Yamaha 代表或授权经销商,可通过访问下方的二维码找到这些代表或经销商的信息。

繁體中文

如需產品的詳細資訊,請聯絡與您距離最近的 Yamaha 銷售代表或授權經銷商,您可以掃描下方的二維條碼查看相關聯絡資料。

한국어

제품에 대한 자세한 정보는 아래 2D 바코드에 액세스하여 가까운 Yamaha 담당 판매점 또는 공식 대리점에 문의하십시오.



https://manual.yamaha.com/dmi/address_list/

Head Office/Manufacturer: Yamaha Corporation 10-1, Nakazawa-cho, Chuo-ku, Hamamatsu, 430-8650, Japan

Importer (European Union): Yamaha Music Europe GmbH Siemensstrasse 22-34, 25462 Rellingen, Germany

Importer (United Kingdom): Yamaha Music Europe GmbH (UK) Sherbourne Drive, Tilbrook, Milton Keynes, MK7 8BL, United Kingdom

DMI36_10m

Yamaha Global Site
<https://www.yamaha.com/>
Yamaha Downloads
<https://download.yamaha.com/>

© 2025 Yamaha Corporation
Published 01/2025
IITY-A0



VHP7010