

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

For the AC adaptor

WARNING

- This AC adaptor is designed for use with only Yamaha devices. Do not use for any other purpose.
- Indoor use only. Do not use in any wet environments.

CAUTION

- When setting up, make sure that the AC outlet is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch of the device and disconnect the AC adaptor from the outlet. When the AC adaptor is connected to the AC outlet, keep in mind that electricity is flowing at the minimum level, even if the power switch is turned off. When you are not using the device for a long time, make sure to unplug the power cord from the wall AC outlet.

For the device

DANGER

Make sure to always observe the basic precautions listed below to prevent the likelihood of serious injury or even death from electrical shock, short-circuiting, damage, fire or other hazards. These precautions include, but are not limited to, the following:

Laser

- Regarding optical disc players, the device employs a laser. Due to the possibility of eye injury, only a qualified service person should remove the cover or attempt to service this device.
- Regarding optical disc players, the device emits visible laser radiation when open. Avoid direct eye exposure to beam. When the device is plugged into the wall outlet, do not try to look inside by placing your eyes close to the opening of the disc tray and other openings.

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply

- Do not place the power cord/adaptor near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord/adaptor, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.

- Only use the voltage specified as correct for the device. The required voltage is printed on the name plate of the device.
- Use the specified power cord/adaptor. Using the wrong cord or adaptor can result in damage to the device or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
- When setting up the device, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the device will not be disconnected from the power source.
- Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.
- Be sure to connect to an appropriate outlet, with a protective grounding connection, if necessary.

Do not open

- The device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If the device appears to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warnings

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the device, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Hearing loss

- Avoid setting all equalizer controls and faders to their maximum. Depending on the condition of the connected devices, doing so may result in feedback that can cause hearing loss and damage the speakers.
- Do not use the device, speakers or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Before connecting the device to other devices, turn off the power of all devices. Failing to do so may result in electric shock, hearing loss, or equipment damage.
- When turning on the AC power in your audio system, always turn on the power amplifier LAST, to avoid hearing loss and speaker damage. When turning the power off, the power amplifier should be turned off FIRST for the same reason.

Fire warning

- Do not place any burning items or open flames near the device, since they may cause a fire.

If you notice any abnormality

- If any of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet. If you are using batteries, remove all batteries from the device. Then have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - Unusual smells or smoke are emitted.
 - Some object has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - Cracks or other visible damage appear on the device.
- If this device or the AC power adaptor/power supply should be dropped or damaged, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel

Battery

- Do not tamper with or disassemble batteries.
- Do not dispose of batteries in fire.
- Do not expose batteries to excessive heat, such as sunshine, fire, hot enclosures, etc.
- Do not attempt to recharge batteries that do not support recharging.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

Wireless devices

- When using a wireless device, do not use the device near medical devices or inside medical facilities. Radio waves may affect electro-medical devices.
- When using a wireless device, do not use the device within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.



CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

Power supply

- When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
- Do not cover or wrap the AC power adaptor with a cloth or blanket.
- Even if the device is rechargeable, never recharge the device while it is wet, since this may result in fire or damage due to electric shock or short-circuit.

Location

- Do not place the device in an unstable position where it might accidentally fall over and cause injuries.
- Do not block the ventilation holes, which prevent the internal temperature from becoming too high. In particular, do not place the device on its side or upside down. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
- When installing the device:
 - Do not cover it with any cloth.
 - Do not install it on a carpet or rug.
 - Make sure the proper surface faces up.
 - Do not use the device in a confined, poorly-ventilated location.Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
- Do not place the device in a location where it may come into contact with corrosive gases or salt air. Doing so may result in malfunction.
- Avoid being near the device during a disaster, such as an earthquake. Since the device may turn over or fall and cause injury, stay away from the device and move quickly to a safe place.
- Before moving the device, remove all connected cables.
- When transporting or moving a device more than 20 kg in weight, always use two or more people. Attempting to lift the device by yourself may damage your back, result in other injury, or cause damage to the device itself.
- Do not expose the device to sudden temperature changes from cold to hot, and do not locate the device in an environment with high humidity (e.g., a room with a humidifier) to prevent condensation inside the device, which may cause an electrical shock, fire, damage to the device, and/or personal injury
- Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave the device alone until temperature equilibrium is reached and the condensation evaporates.

- Always consult qualified Yamaha service personnel if the device installation requires construction work, and make sure to observe the following precautions.
- Choose mounting hardware and an installation location that can support the weight of the device.
- Avoid locations that are exposed to constant and/or excessive vibration.
- Use the required tools to install the device.
- Inspect the device periodically.

Handling cautions

- Do not insert your fingers or hands in any gaps or openings on the device (e.g., vents, disc slots, ports, panel, etc.).
- Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (e.g., vents, disc slots, ports, panel, etc.). If this happens, immediately turn off the power of the all devices, unplug the power cord from the AC outlet, and have the device inspected by qualified Yamaha service personnel.
- Do not rest your weight on the device or place heavy objects on it. Avoid applying excessive force to the buttons, switches or connectors to prevent injuries.
- Do not operate the speaker if the sound is distorting. Prolonged use in this condition could cause overheating and result in fire.
- Avoid pulling the connected cables to prevent injuries.
- When choosing a power amplifier for use with a passive speaker, make sure that the output power of the amplifier is lower than the power capacity of the speaker. If the output power is higher than the power capacity, malfunction or fire may occur.
- When using an optical disc player, use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
-  : The label on the device indicates that the surface to which the label is attached may become hot during operation.

Battery

- Always replace all batteries at the same time. Do not use new batteries together with old ones.
- Do not mix battery types, such as alkaline batteries with manganese batteries, or batteries from different makers, or different types of batteries from the same maker, since this can cause overheating, fire, or battery fluid leakage.
- Keep batteries away from children.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings. Failure to do so might result in overheating, fire, or battery fluid leakage.
- When the batteries run out of power, or if the device is not to be used for a long time — or if you only use the AC power adaptor — remove the batteries from the device to prevent possible leakage of the battery fluid.
- When storing or discarding batteries, insulate the terminal area by applying tape, or some other protection. Mixing them with other batteries or metal objects can cause overheating, or battery fluid leakage.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the device, or data that is lost or destroyed.

Information for users on collection and disposal of old equipment and used batteries:



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:



If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union:



These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the EU Battery Directive for the chemical involved.

Cd

(weee_battery_eu_en_02)

EN

Manual Development Department
© 2016 Yamaha Corporation
Published 04/2016 MW-A0